



RESIDENCE COLLECTION - MAIN PROFILES & REINFORCEMENTS


R002 Residence 9 Frame

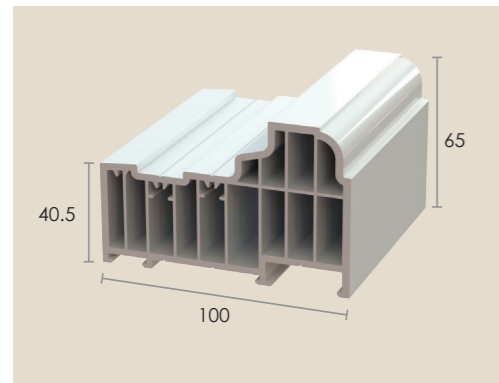


R7002 Residence 7 Frame

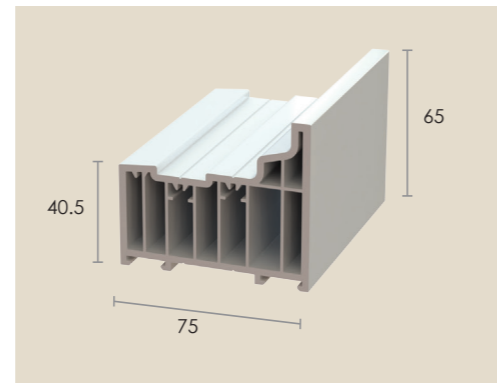


R001 Residence 9 Transom/Mullion

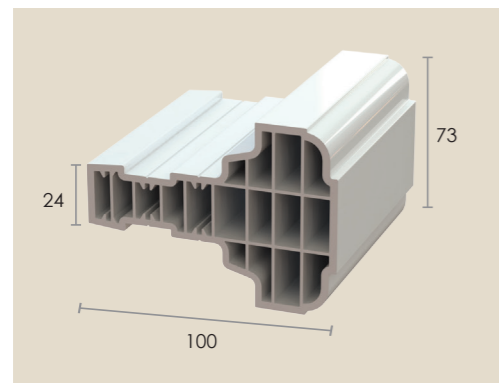


R001 M Residence 7 Transom/Mullion

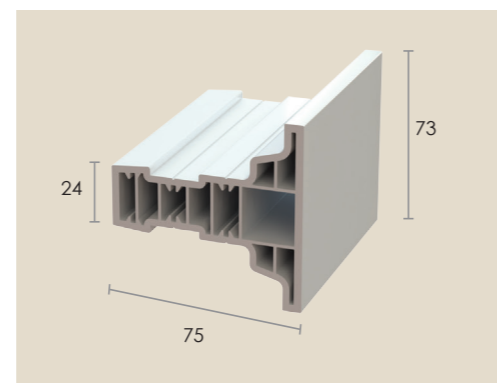


R003 Flush Window Sash

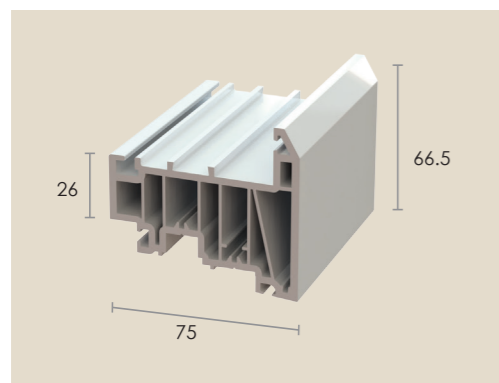


R001 SM Sash Transom-Mullion

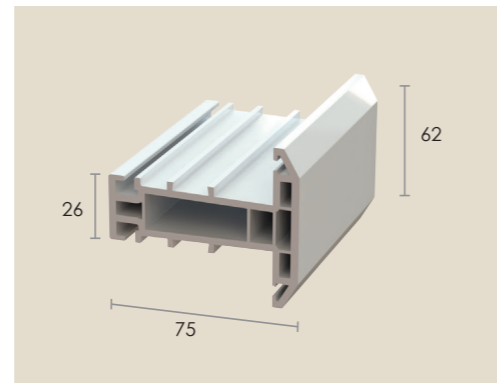


R003 FD Flush Door Sash

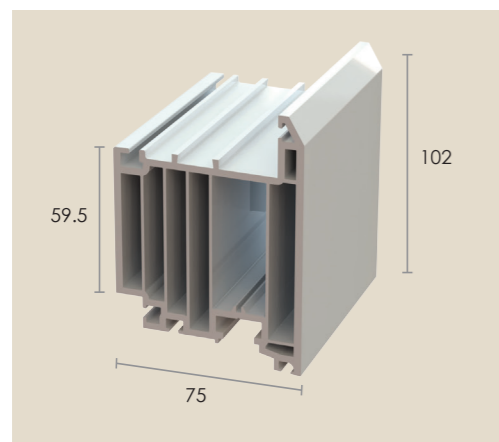


R003 OD Open In Door Sash

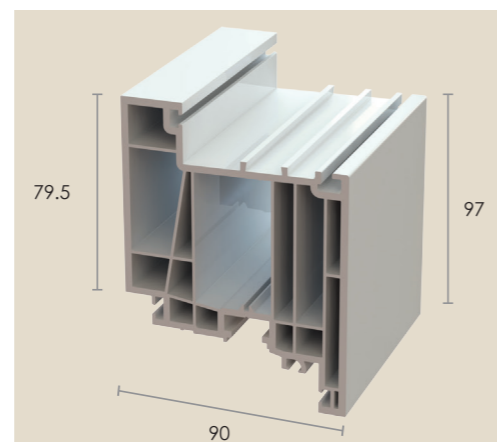


R205 PVCu Reinforcing
Use with frames

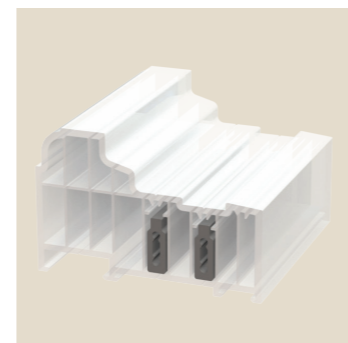


R208 PVCu Reinforcing
Use with Mullions

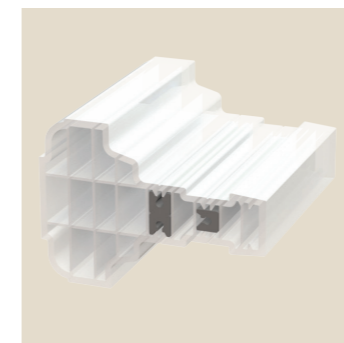


R124 Steel Reinforcing
Use with R001M
1.5mm Gauge

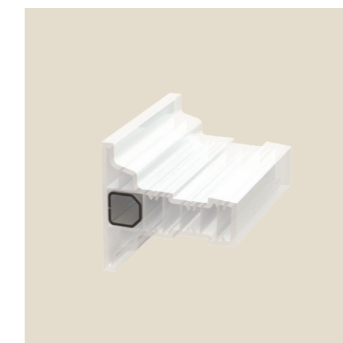


R101 Steel Reinforcing
Screw Retention

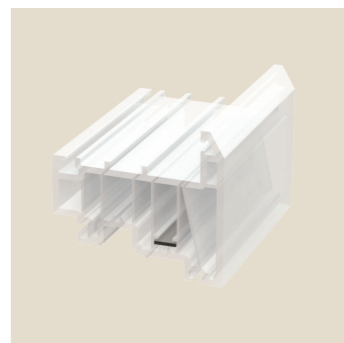


R102 Steel Reinforcing
1.5mm Gauge
Use with R003 and frames

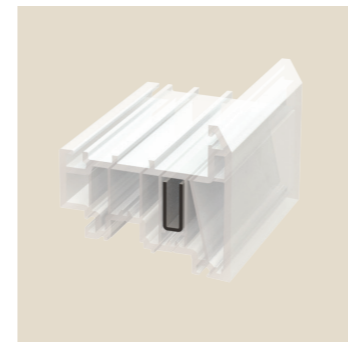


R126 Steel Reinforcing
1.8mm Gauge
Use with R003

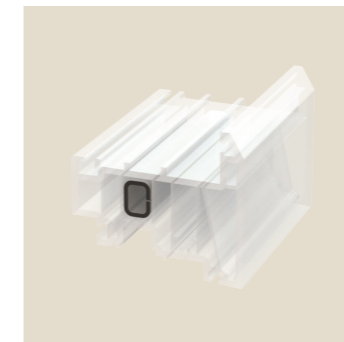


R122 Steel Reinforcing
1.5mm Gauge
Use with R003FD

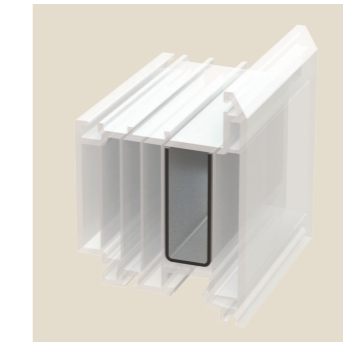


R125 Steel Reinforcing
1.8mm Gauge
Use with R001SM

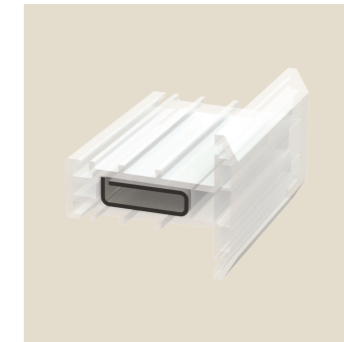


R210 PVCu Reinforcing
Use with R001SM

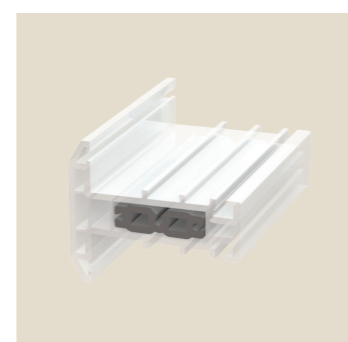


R004
28mm Decorative
Bead

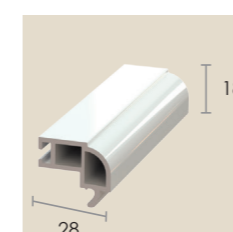


R004SQ
28mm Square
Bead

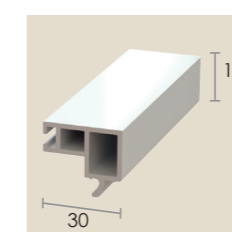


R005
44mm Decorative
Bead

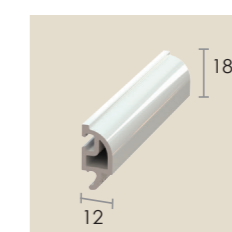


R005SQ
44mm Square
Bead

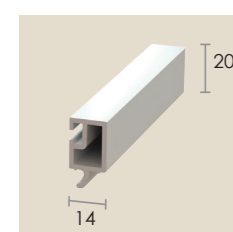


R202
Georgian Bar
Use externally
with all sashes

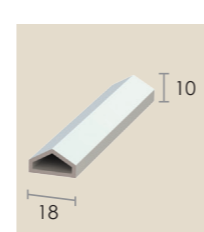


R201
Georgian Bar
Use internally
with all sashes

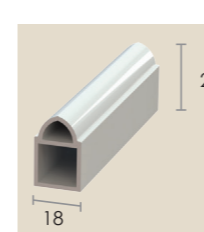

R215
Georgian Bar
Use with all
Sashes

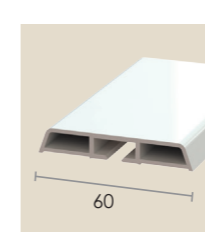


R220
Aluminium
Carrier

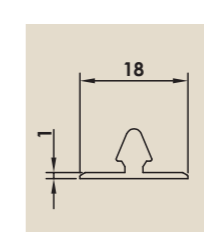

R221 Large
Georgian Bar
Use internally
with all sashes



R222 Small
Georgian Bar
Use internally
with all sashes
(single bar only)

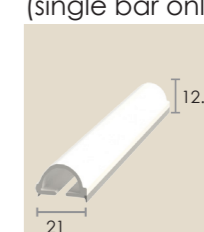

R223
Georgian Bar
Use externally
with all sashes

